

# Push button switch

[z0kpy0aYlw31DED-0.png](#)

The **iTriangle - Push button switch** is a momentary switch type. It consists of one independent "momentary on/off" button. "Momentary" means that the button rebounds on its own after it is released. The button outputs a HIGH signal when pressed, and LOW when released. The pin marked "Sig" refers to "Signal" while "NC" refers to "No Connection". There are two versions of this button available as showed in the pictures. The only difference is the direction of the Grove socket.

## Features

- Easy to use momentary ON/OFF button
- Uses Standard 4-pin iTriangle Cables

---

Revision #6

vytvořené 2 roky nazpět uživatelem [Admin](#)

aktualizováno 2 roky nazpět uživatelem [Jiri Krulis](#)